



Переходные втулки со шпоночным пазом серии RV

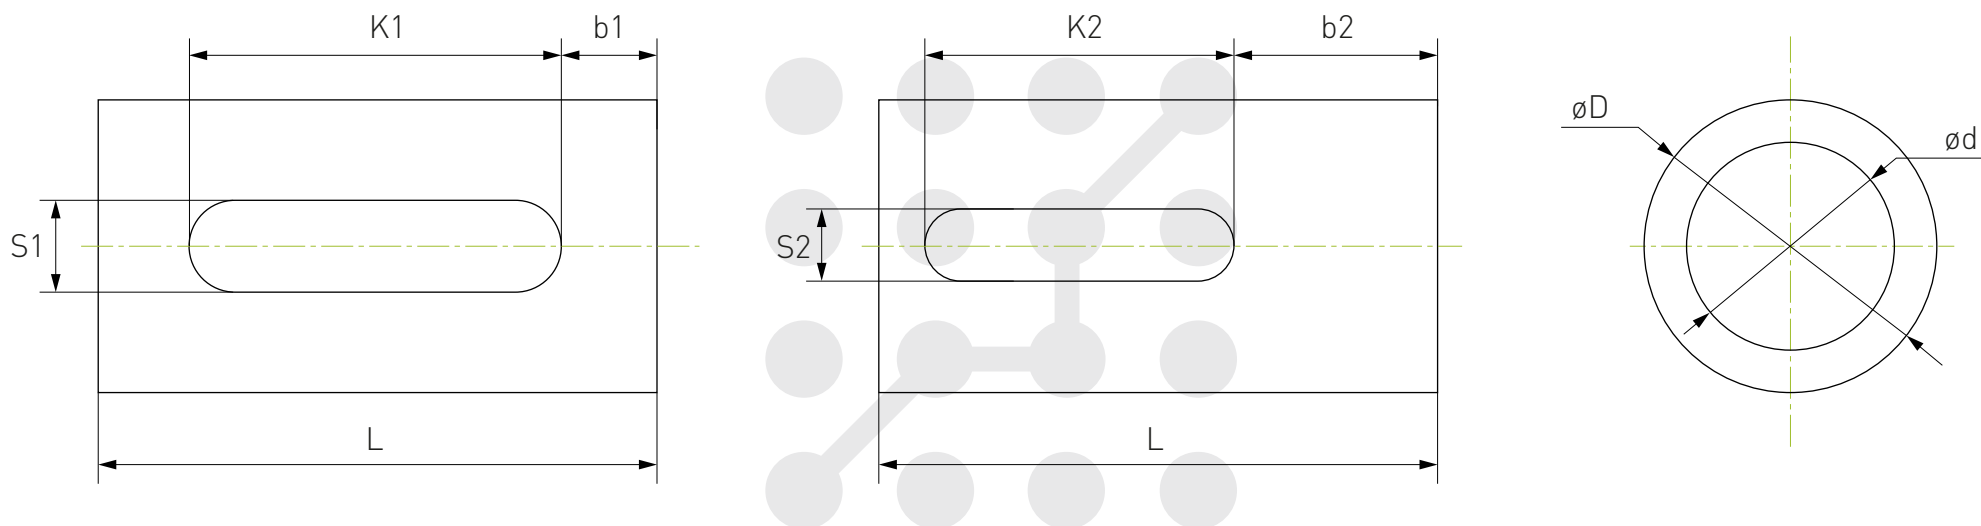

Наименование	L	S1	K1	b1	S2	K2	b2	Ød	ØD
RV9-11	23	4	18	2.5	3	13	8.5	9	11
RV9-14	30	5	22	4	3	14	9.5	9	14
RV11-14	30	5	22	4	4	16	9.5	11	14
RV14-19	40	6	30	5	5	21	11.5	14	19
RV19-22-6	50	6	40	5	–	–	–	19	22
RV19-22-8	50	8	40	5	–	–	–	19	22
RV19-24	50	8	40	5	6	28	16	19	24
RV19-28	60	8	40	10	6	28	22	19	28
RV22-24-8	50	8	40	5	–	–	–	22	24

Наименование	L	S1	K1	b1	S2	K2	b2	Ød	ØD
RV22-28	60	8	50	5	6	35	18.5	22	28
RV24-28	60	8	50	5	8	40	14	24	28
RV28-38	80	10	60	10	8	48	16	28	38
RV28-42	80	8	60	10	10	60	10	28	42
RV32-38	80	10	70	5	–	–	–	32	38
RV32-42	80	12	70	6	10	60	11	32	42
RV38-48	80	14	70	5	10	80	–	38	48
RV42-48	80	14	70	5	–	–	–	42	48

Переходные втулки со шпоночным пазом серии RV

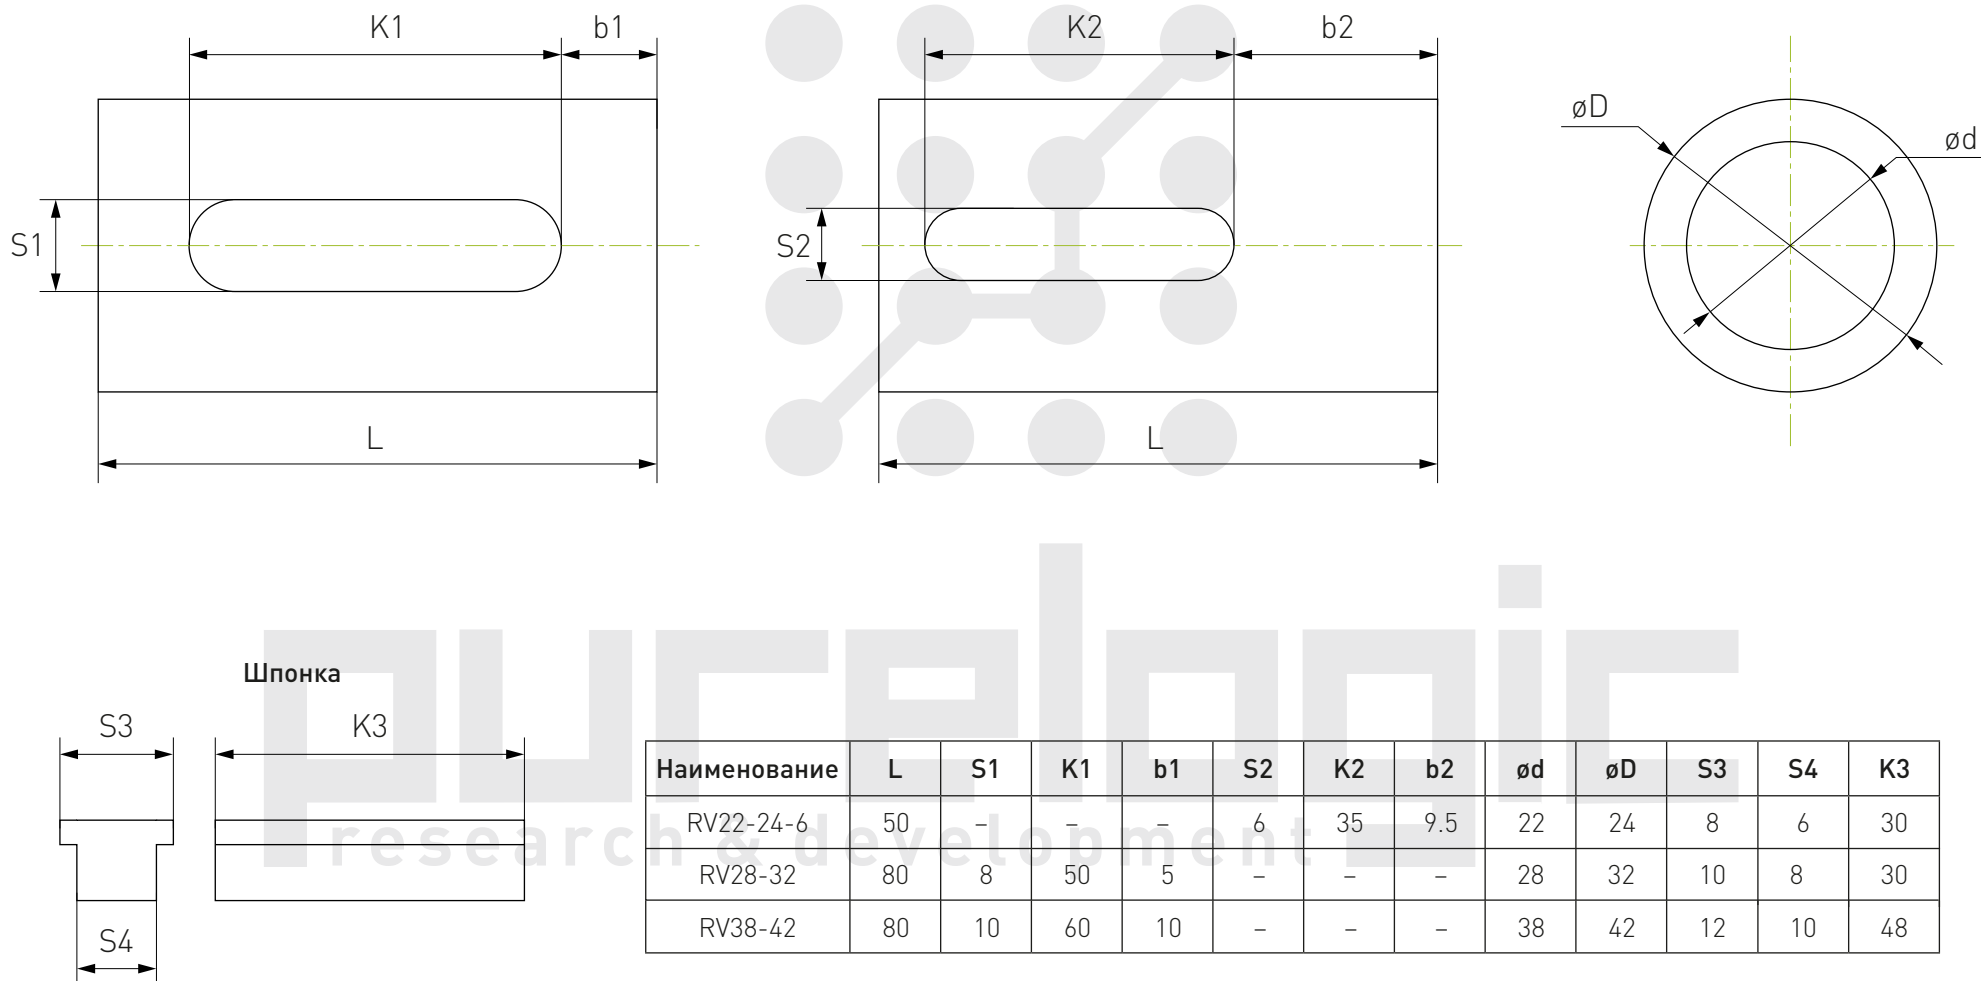

Втулка переходная серии RV14-24

